


MINI Two CrossLines
LASER LEVEL (RED & GRE
English Manual

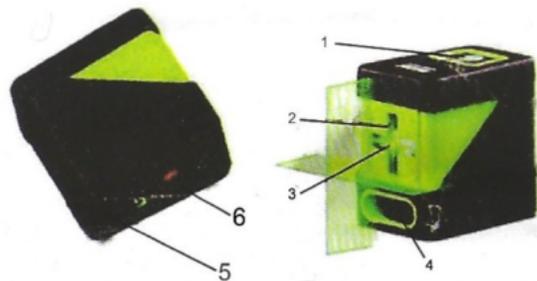

1. Key board
2. Laser window
3. Laser source
4. Lock switch
5. Battery compartment
6. 1/4" Thread connector 1/4

OPERATING

Before insert two pieces of AA batteries , please make sure lock switch at " OFF " position . And please keep the lock switch at " OFF " position durning moving the laser level ors storage it .

It is very im portant!

1. Auto Self - leveling Mode:

Turn lock switch at " ON " position , laserline will flash and alarm until auto seif - leveling . If flash and alarm do not stop long time , please put laser level on much fiatter place , because the self - leveling range is about 4° . Press keyboard to turn on or off laser lines . Or turn lock Switch at " ON " position , Laser level stop working .

2. Inclined Line Mode:

When lock at " OFF " position , press key board , laser line switch on , in this case , you can get any inclined cross lines . Laserline do not flash and alarm even line is not leveling . Press key board again , laserline switch off .