



## Optional accessories: SensoLite laser receiver

### SensoLite 200:

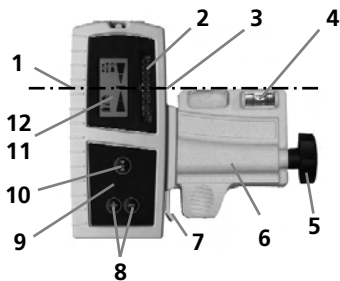

- 1 Perimeter marking groove
- 2 Laser beam reception field
- 3 SpotLite marking LED
- 4 Spirit level
- 5 Fastening screw
- 6 Universal mount (optional)
- 7 Fixing lever

### SensoLite 310:

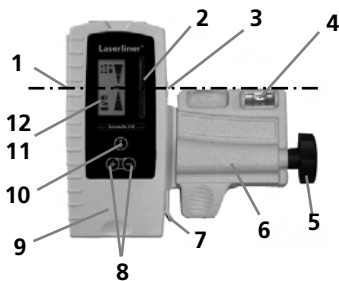

- 8 volume control
- 9 Battery compartment (rear side)
- 10 hand receiver mode / fine/free-hand range switchover
- 11 LCD indicator (rear side)
- 12 LCD indicator

### ▼ Precision range:

▲ Mode with smaller tolerance for precise alignment (e.g. with measuring staff).

### ▼ Free-hand range:

▲ Mode with greater tolerance for less precise alignment by hand.

SensoLite is able to detect the laser beam at a great distance. Move the SensoLite up and down through the laser beam until the middle indicator appears. Mark the measured height at the perimeter marking groove.

**SpotLite marking:** The projected light beam at the height of the laser beam simplifies precise marking and prevents parallax error.

