


Spot-On Alignment Lasers - Operating Instructions



Set Contents

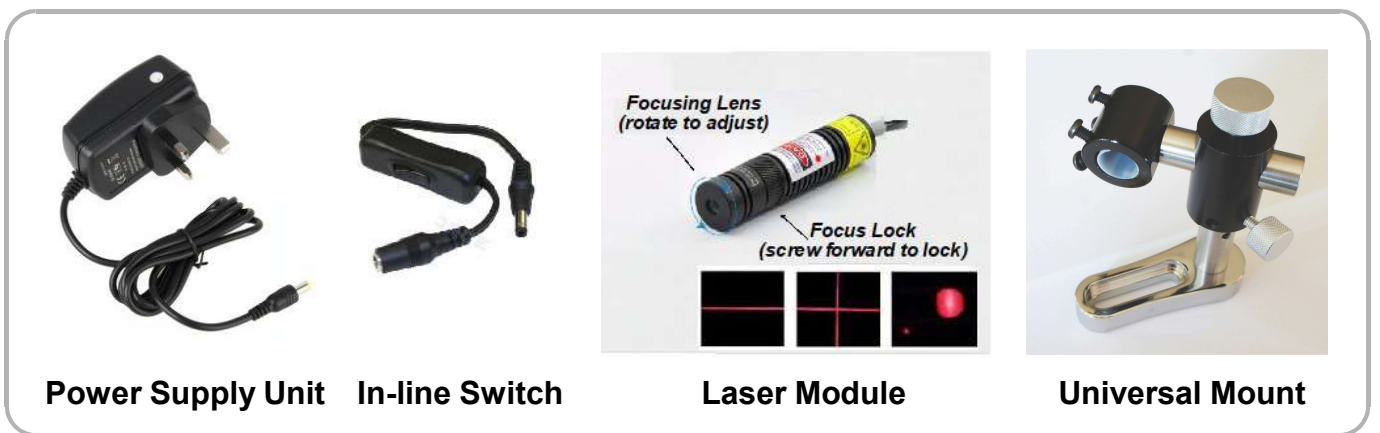

1. Check contents of the set
2. Assemble laser module and universal mount
3. Fix universal mount/laser module assembly to machine
4. Connect power supply unit with in-line switch to laser module
5. Plug in power supply unit to mains
6. Switch-on and focus laser
7. Please refer to the webpage for safety and technical information

Optional Accessories

