Selection PRO

FL 80 Tracking Liner SP with automatic target tracking

- The new FL 80 Tracking Liner SP is the latest product in our Selection PRO range which redefines innovation and ease of use.
- Due to its tracking function it is unique when compared to all other products in its category.
 The vertical laser line automatically aligns with the on-grade position of the receiver. This self-alignment of the instrument eliminates arduous manual alignment.



- Intuitive keypad
- Receiver FR 57-TR to extend working range up to 80 m and to use at tracking function
- 3 What's in the kit







TECHNICAL DATA	FL 80 TRACKING LINER SP	FEATURES	SUPPLIED WITH
			ARTNO. 583000
Self-levelling range Accuracy Working range · with receiver · with tracking function Centering accuracy Tracking Power supply Operating time Laser Operating time Tribrach Protection class Laser diode Laser class Temperature range	± 3° ± 2 mm / 10 m 30 m 80 m 30 m ±1 mm / 10 m Li-lon 8 h Li-lon 15 h Alkaline IP 54 635 nm 2 -10 °C - +45 °C	4 vertical lines at 90° to each other 1 horizontal line with a 130° arc Laser cross to the ceiling Plumb down beam Self-levelling compensator with magnetic damping Tracking function up to 30 m 360° horizontal orientation in either motorized or manual mode Use with FR 57-TR receiver (incl.) to extend the working range up to 80 m (w/o tracking) Self-levelling function can be switched off for manual use Slow motion screw for fine adjustment Audible and visible alarm when instrument is out of level	FR 57-TR receiver Floor tripod Magnetic target Li-Ion battery pack with charger Battery case for the optional use of Alkaline batteries 5/8" tripod adapter Container

^{*} depending on room illumination

Perfect alignment – the easy way!

- The automatic tracking function of the FL 80 Tracking Liner SP saves you time and money eliminating the need for manual alignment. The alignment is done automatically via the receiver.
 - · Activate the tribrach motor
 - · Locate on-grade position of the receiver at the target point
 - · Press the "Auto" button on the receiver then press an arrow button
 - · The nearest vertical laser line automatically tracks to coincide the on-grade position of the receiver



