


CLD-100

Line Laser Detector

Parts and Functions

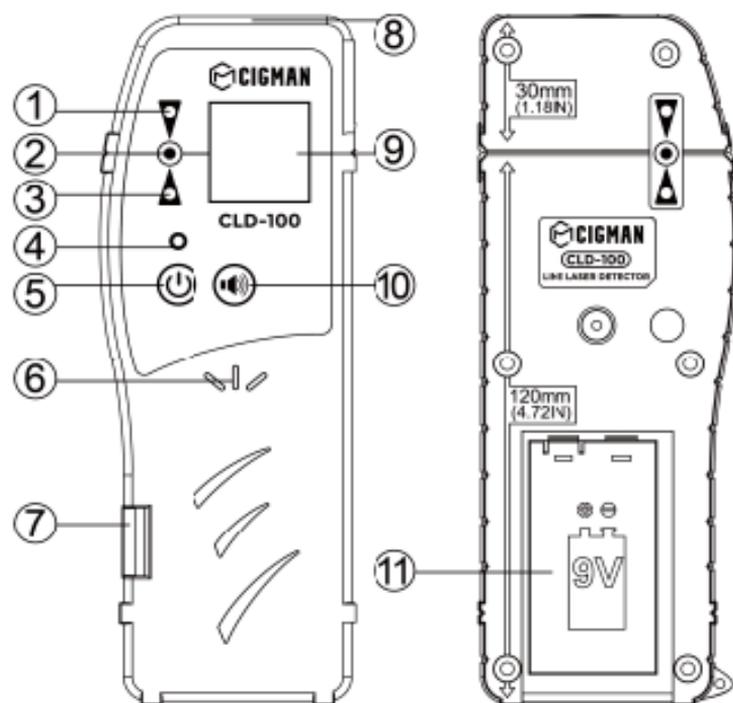

- ① Direction indicator "move downward"
- ② Center indicator
- ③ Direction indicator "move upward"
- ④ Power light
- ⑤ On/Off button
- ⑥ Speaker
- ⑦⑧ Bubble vial
- ⑨ Detection window
- ⑩ Audio signal button
- ⑪ Battery compartment

Operation

1. Must turn your laser level in "Pulse Mode" before using the detector.
2. Tighten the receiver on a wall or post and press the On/Off button to turn it on, then turn the laser beam towards the detector.
 - Direction Indicator "Move Upward" flashes and beeper sounds rapidly when laser beam is below
 - Direction Indicator "Move downward" flashes and beeper sounds slowly when laser beam is above Center Indicator.
 - Center Indicator and a long beep are activated when laser beam runs through the Center Indicator.
3. Press "Audio Signal Button" to change sound mode.

Specifications

1. Auto shut-off: The detector will be off in 10mins when it is not in use.
2. Power: 9V Battery
3. Size: 150(H)x55(W)x26(D) (mm)
4. Weight : About 150g (Including battery)